

Basic Parts List series 218

 103 Second Wheel and Pinion	 122 Bridge, Coil, and Fork Foot	 159C Hole Jewel and Setting	 180A Pawl Bridge Sub-Assembly
 105 Third Wheel Assembly	 125 Train Bridge Screw, Pawl Bridge Lock Screw	 159D Spring	 182 Pawl Bridge Cam <i>st/SS</i>
 106 Center Tube Assembly	 140 Center Second Hand (To Suit Dial)		 183 Tuning Fork Screw
 107 Fourth Wheel and Pinion	 141 Cell Strap		 184 Pawl Bridge Pivot Screw
 109 Center Wheel Assembly	 142 Minute Hand (To Suit Dial)	 167 Lower Jewel for Fourth Wheel	 186 Fork Spacer
 110 Hour Wheel	 143 Hour Hand (To Suit Dial)	 168 Upper Bushing for Third and Fourth Wheels	 202 Clutch Lever Spring
 111 Minute Wheel and Pinion	 148 Dial Screw	 168B Cap Jewel	 203 Yoke
 112 Index Wheel and Pinion	 151 Coil Form Screw	 168C Hole Jewel and Setting	 204 Clutch Lever
 119 Setting Wheel	 159 Upper and Lower Bushing for Index and Second Wheels	 168D Spring	 205 Setting Lever
 121 Center Second Brake Spring	 159B Cap Jewel	 176A Setting Stem	 207 Clutch Wheel

Replacement spare parts can be ordered from your Bulova Material Distributor.

 Setting Lever Screw 209	 315 Ground Screw	 700 Fourth Bridge
 Hack Lever Spring 211	 319A Casing Spring	 709 Pillar Plate
 Ground Plate 212	 320 Casing Spring Screw	
 Special Train Bridge Screw, Ground Plate Screw 213	 321 Center Second Brake Spring Screw	
 Hack Lever Assembly 220	 404 Train Bridge	
 Index Finger Assembly 230		 715 Cell Coil Assembly 4240
 Pawl Finger Assembly 231		
 Cell Strap Hold-down Screw, Lead Strap Screw 304	 606A Coil Lead Stand-Off	 716 Tuning Fork Assembly
 Fourth Bridge Screw 305	 606B Coil Lead Stand-Off Bushing	
 Yoke Screw 309	 610 Insulator	 814A Cell Strap Stand-Off Tube

IMPORTANT: Be sure to indicate model number engraved on movement when ordering replacement parts.