



Renvoi
Setting wheel
Rueda de transmisión
Zeigerstellrad
Rinvio

3 AC
3 AH

4 AR
4 AU
4 AX

5 A
5 AD
5 AH
5 AN
5 AR

5 AB
5 AC
5 AF

6 A
6 C

6 AH
6 AK
6 AM
6 AZ
6 BA
6 BC
6 BD
6 BE
6 BK
6 BKC
6 BL
6 BM
6 BMC
6 BO
6 BOC
6 BS
6 CA
6 CAC

6 CB
6 CBC
6 CE
6 CF
6 CFC

6 BP
6 BPA
6 CHAC
6 COAC

6 EA
6 EB

7 AA
7 AH
7 AK
7 AN
7 AP

7 AD
7 AF
7 AL
7 AM
7 BS
7 BSC
7 BU
7 BUC

7 BEAC

8 AC
8 AE

8 AD
8 AH
8 BA

8 BBA
9 AR
9 ARC
9 AS
9 ASC

10 AK
10 AKcs
10 AKCH
10 BH
10 BK
10 BM
10 BMC
10 BMCD

10 BC
10 BCC
10 BS
10 BT
10 BTC
10 BU
10 BUC

10 BNCH
10 BOAC
10 BP
10 BPAC
10 BPAD

10 CB
10 CBAC
10 CBC
10 CBCD
10 CNCH

10 BRC
10 CMC
10 CSC

10 BZ
10 BZAC
10 BZACD
10 BZC

11 AB
11 ABC

11 AC
11 ACA
11 ACAC
11 ACC

11 AERC

11 AF
11 AFA
11 AFAC
11 AFACD
11 AFC
11 AFCD
11 AFD
11 AFF

17 AH
17 AHS
17 AL
17 ALS