
TECHNICAL INFORMATION

CITIZEN QUARTZ
Cal. No. 921 ** **



§ 1. OUTLINE

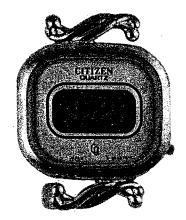

This is a digital quartz crystal watch for ladies, featuring an extremely thin-gauge movement structure. It has been developed in response to the recent market requirements to enrich the varieties of fashionable and dressy bracelet watches for ladies' use.

§2. FEATURES


- 1) The movement measures only 13 mm x 15.8 mm (max. diameter 16 mm) in size and 3.98 mm (power cell part 4.03 mm) in thickness. With such extremely thin and compact measurements, the design varieties are further increased for the bracelet- and dress-watches for ladies.
- 2) The color-patterned reflecting plates are added newly and thus can be used in combination with the colors of the watchcases, that is, the gold-color reflecting plate is used suitably with the GP case and the silver-color one with the SS case respectively. As a result, the more colorful designs become available along with the compact and thin-gage movement.
- 3) The two units of the push-button facilitate an easy operation for display switching and correction.
- 4) The calendar (month and date) can be set automatically including the leap years after set once correctly, thus omitting the manual correction each time.
- 5) The movement uses only two pieces of screws in all with much reduced number of the component parts, thus facilitating an easy disassembling and assembling.

§3. SPECIFICATIONS

Caliber No.	9210A	
Туре	Digital-type quartz crystal watch with LC (liquid crystal) display	
Movement	Size: 13mm x 15.8mm Thickness: 3.98mm	
Oscillation	32,768Hz	
Accuracy	±15 sec./month under normal temperatures	
Display system	FE twist-type nematic LC display	
Display information	Constant digital display of "hour" and "minute" Switching display of "month" and "date" Switching display of "second"	
Effective temperature range	0°C ~ +60°C (32°F ~ 140°F)	
Integrated circuit	C/MOS-LSI (1 unit)	
Additional mechanisms	Fully automatic calendar (including leap year)	
Power cell	Small-size silver oxide power cell (1 unit) Parts No. : 280–34 Nominal voltage : 1.55V Capacity : 15mAH Size : 6.8mmø x 2.15mm Life : 1 year	

§ 4. HANDLING INSTRUCTIONS


1) How to read time/calendar and display switch

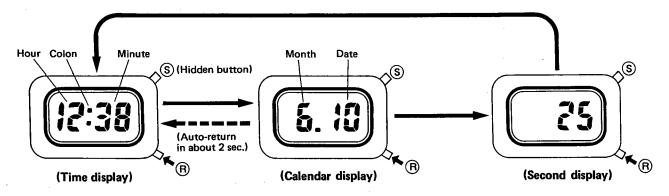

- (Righter Read/Set button): Display switch/Time & calendar setting
- S button (Select button): Selection for setting digit

2) Setting method of displays

With operation of both \bigcirc and \bigcirc buttons, the display area to be corrected can be called out and then set independently. The digit to be corrected, flashes to indicate the correction in that order of "second", "minute", "hour", "month", "date" and "leap year". The date changes as "1-31-1" and "1-30-1" for the 31-day month and the 30-day month respectively ("1-29-1" for February). The area to be corrected is called out with push of the \bigcirc button and set with push of the \bigcirc button. In the diagrams below, the setting procedure is given in that order of $\bigcirc 1-2-3$ and so on (the area to be corrected is shown by the flashing symbol of dotted circles).

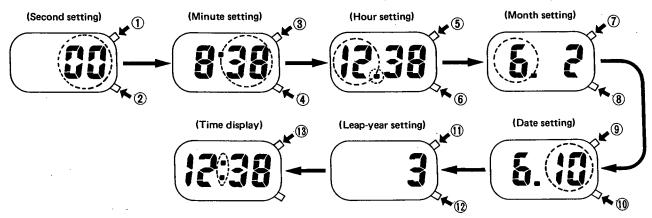

- *It the second was between 30 and 59, when ® button was pressed. One minute will be added to the minute display.
- *Never fail to switch to the time display with push of the S button after setting the time or the calendar.
- *The leap year is indicated by "0", and figures "1", "2" and "3" indicate the number of the year counted from the leap year. Only the display of "0" has flashing.
- *The upper dot of the colon shows AM and the lower dot indicates PM respectively in the hour setting.


§ 5. DISASSEMBLING/ASSEMBLING PROCEDURE OF MOVEMENT

Disassembling procedure:


① ~ ①
① ~ ①


Assembling procedure: $(1) \sim (1)$ The number of screws coming with the parts shown by the symbol like (7 2).

The replacement of the power cell can be given by opening the caseback.

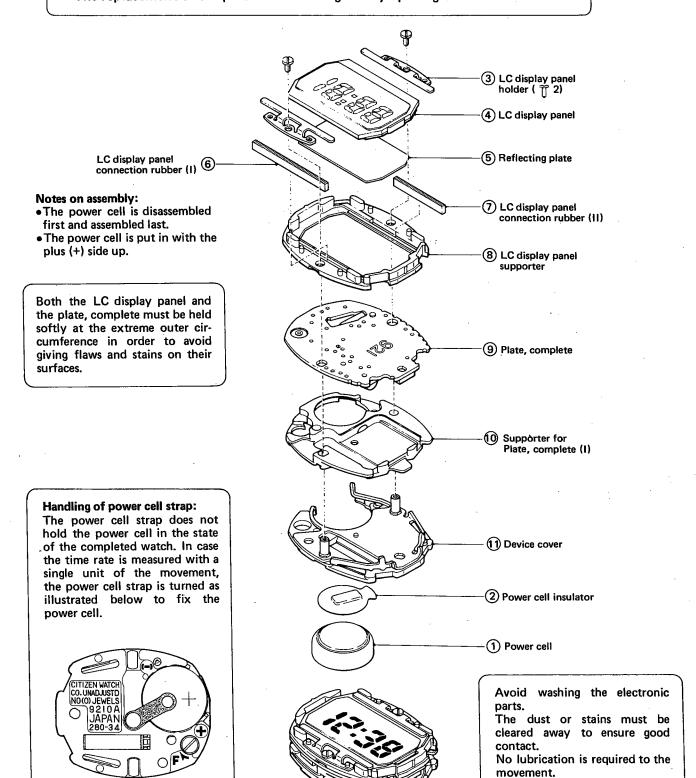

§6. TROUBLESHOOTING AND ADJUSTMENT

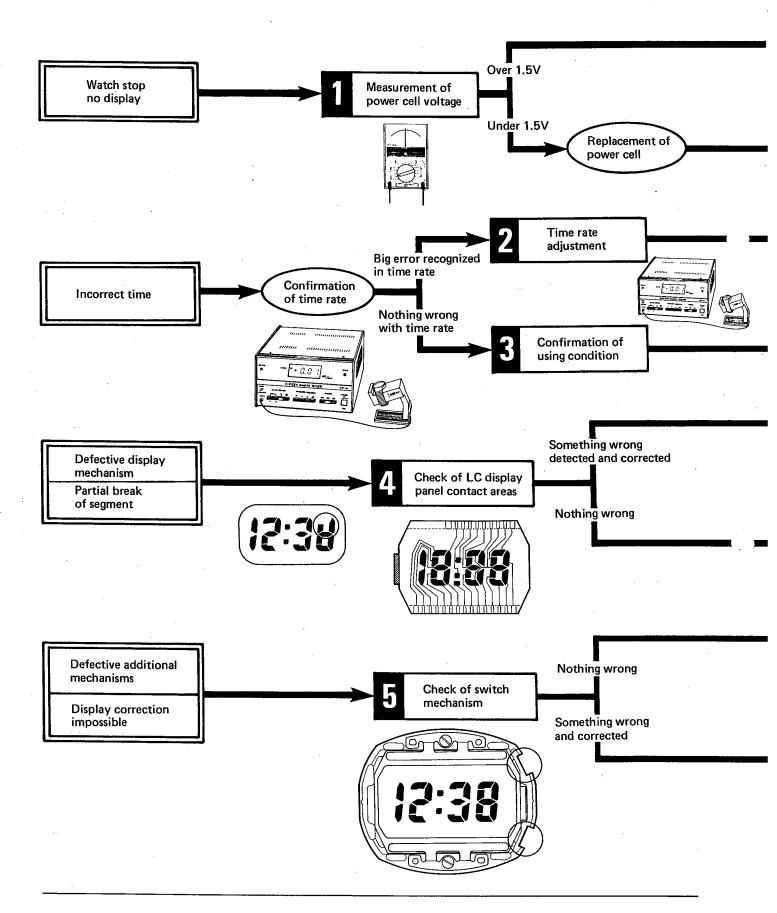

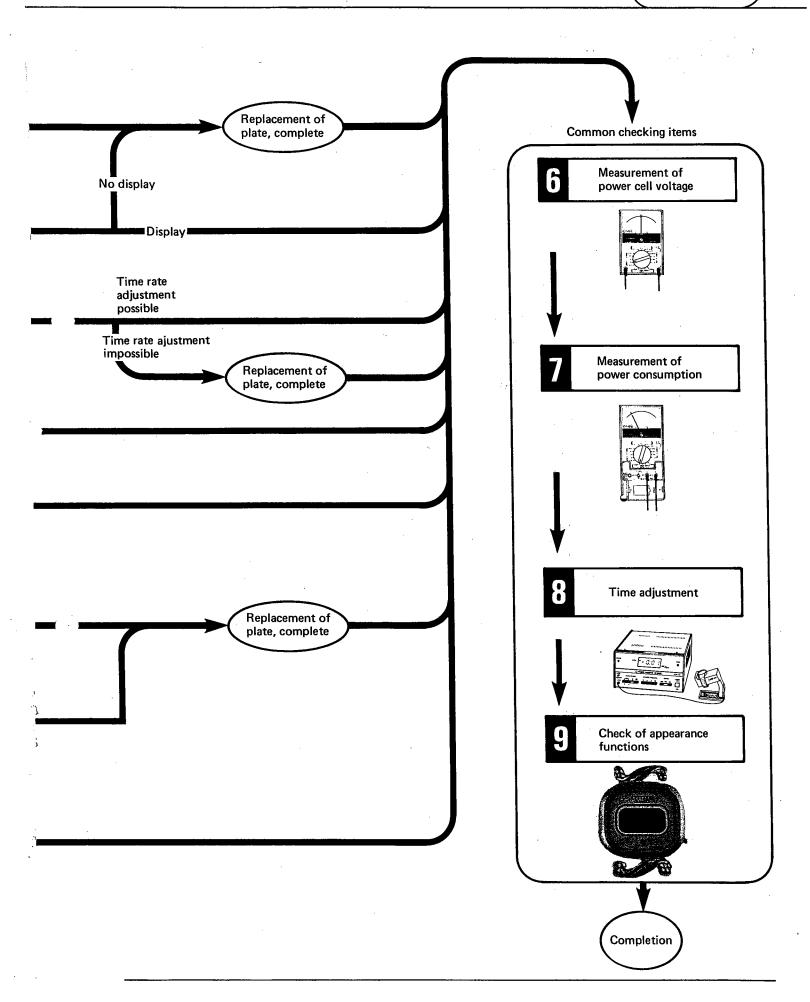

Checking items	How to check	Results and treatment
Measurement of power cell voltage	Power cell voltage: Over 1.5V	Over 1.5V • No display of LC display panel —> Replacement of plate, complete Under 1.5V
	X 1 XIO XIOO OFF 600 OFF 600 OFF 600 V 3 30 V 12 V 3 30 V 4 600 V 12 V	After replacement of power cell: Display of LC display panel Measurement of power consumption No display of LC display panel Replacement of plate, complete
	CITIZEN WATCH CO. UNADJUSTD NO(0) JEWELS 9210 A JAPAN 280-34	
	*In case the measured value is not stable or OV with cell incorporated and the measured value shows more with a single unit of the power cell, the contact is imperfect between the power cell connector and the minal of the power cell. So the dust or stain cleared away on the contact surface.	e than 1.5V sometimes e minus ter-

Big error recognized in time rate

Charleinn itama	How to short	B
Checking items 2 Confirmation of time rate	In case the time is incorrect (big error recognized in time rate), the frequency has big aberrations for the quartz crystal oscillator attached to the plate, complete. Thus, the trimmer condenser is turned clockwise or counterclockwise to adjust the time.	Results and treatment
	CITIZEN WATCH CO. UNADJUSTD NO(0) JEWELS 9210 A JAPAN 280-34 Trimmer condenser (The watch gains with clockwise turn as indicated by the arrow direction)	◆Time adjustment possible
	*In case the time rate has a big error or the time rate does not change at all even with the turn of the trimmer condenser, the trimmer condenser has some fault.	

Nothing wrong with time rate


Checking items	How to check	Results and treatment
Confirmation of using condition	How the customer has been used his watch must be confirmed as follows.	
	(1) Check whether the customer handled his watch in a wrong way. (2) Check whether the watch was used in the extreme	
	temperatures, i.e., outside the effective temperature range. (3) Check how many days have passed since the	
	watch had the time adjustment last.	

Checking items	How to check	Results and treatment
Check of LC display panel contact areas	In case the partial break occurs for the segment, the two factors are possible: the contact is imperfect between the LC display panel and the electronic circuit; and the LC display panel and the electronic circuit have some fault. And the former factor (imperfect contact) is conceivable in more cases than the latter factor. So the contact areas must be checked carefully.	
	Check of LC display panel holder mechanism	Screws broken
	(1) Check whether the screws for LC display panel holder is broken or loose.	→ Replacement
	(2) Check whether the LC display panel holder is holding the LC display panel evenly or	Screws loosened To be Retightened
	whether the LC display panel holder has some deformation.	No even holding given
LC	ews for display	→ To be assembled again
pai -	LC display panel holder	LC display Panel holder deformed Replacement
		- Neplacement
CHARLES	Check of LC display panel connection rubber (1) Check whether the rubber is twisted.	Rubber twisted or worn out
	(2) Check whether the rubber is worn out or	
LC display panel connec- tion rubber	stretched out extremely. (3) Check whether some stains or dust stick to	Dust or stains sticked
	the rubber.	→ Clearing
	A careful inspection is given to the electrode part where the segment break is detected to check the electrode part of the LC display panel has some	LC display Panel cracked
	cracks and dust or stains sticked.	→ Replacement Dust or stains
		sticked
6	Electrode	→ Clearing No fault detected
	Electrode	through above checking
12:3		Replacement of LC display panel
		Correction impossible yet
		Replacement of plate,
	*Point of checking The peripheral area of the segment is pushed with a finger softly as illustrated in the left diagram. In this case if the broken segment gives display, it is known that the fault is caused by the imperfect	complete
	contact.	
	Note: Avoid pushing the LC display panel too strongly to	

hecking items	How to check	Results and treatment
Check of switch mechanism	The movement is taken out of the watchcase.	
		Nothing wrong with operation
	The each switch part is pushed with tweezers as illustrated left to check whether the selection of correcting digits and the display correction are possible or not.	2. Check of push-buttons Something wrong detected with operation 3. Check of switch spring mechanism
	Display	mechanism
	correction	•
	2. Check of push-buttons	·
	Each of the push-buttons is taken out of the watch- case.	
	(1) Check whether each push- button can be operated smoothly. (2) Check whether some dust or stains stick to the push-buttons as well as to the areas of the watch- case where the push-buttons are set. (3) Check whether the push- buttons have some bend.	Dust or stains sticked Clearing Buttons deformed or broken Replacement
	(The silicon oil is applied to the packing of each push- button.)	
	3. Check of switch spring mechanism	
	(1) Check whether each switch spring of the supporter for plate, complete unified with the device cover is deformed or broken.	-
		Switch spring deformed or broken Replacement of
•		device cover

Checking items	How to check	Results and treatment
	(2) Each switch spring is pushed with the tweezers with both the supporter for plate, complete (I) and the plate, complete incorporated into the device cover. Thus, whether or not a correct contact is secured to the pattern on the plate, complete.	
	Plate, complete Pattern Supporter for plate, complete (I)	Nothing wrong Replacement of plate, complete
	Device cover	
		•
·		

Checking items	How to check	Results and treatment
Measurement of power cell voltage	CITIZEN) 2 ADJ 2 ADJ OFF	Over 1.5V Measurement of power consumption Under 1.5V Measurement of power consumption after replacement of power cell
	300 D 120 A 600 С V 3 30 JA 600 JA 3 MA DC A DC A	
	CITIZEN WATCH CO. UNADJUSTD NO(0) JEWELS 9210 A JAPAN 280-34	
		[

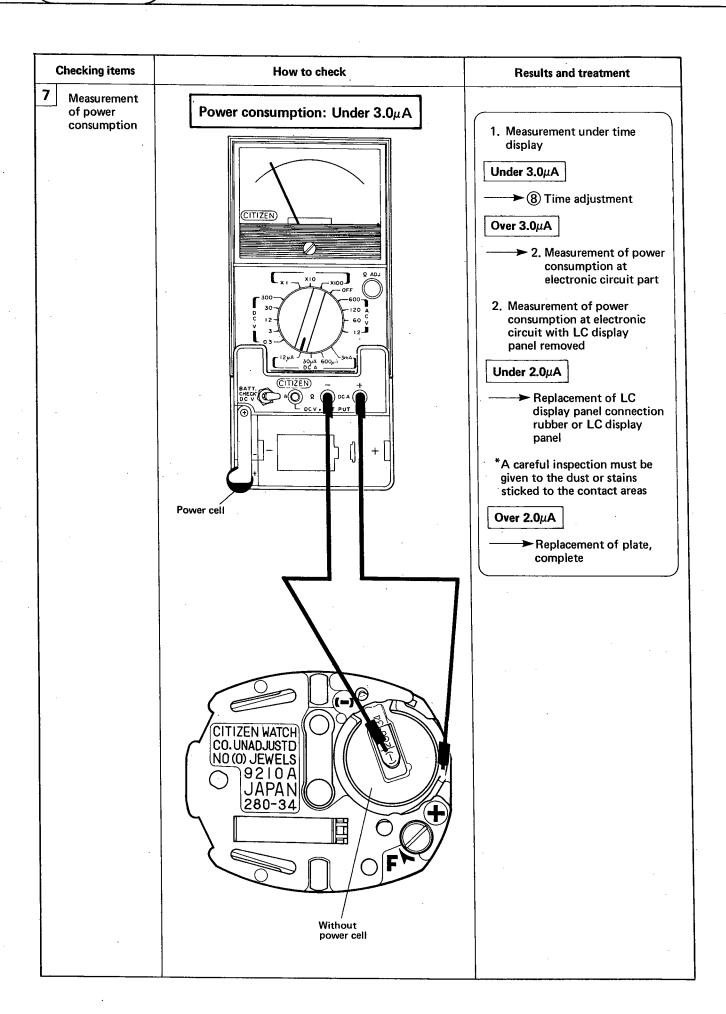

Checking items	How to check	Results and treatment
7 Time adjustment	The time rate is measured using the timing machine to carry out time adjustment.	
	CITIZEN WATCH CO. JINADJUSTD NO(0) JEWELS 9 2 1 0 A JAPAN 280-34	
·	*The watch gains with clockwise turn of the trimmer condenser as indicated by the arrow direction.	,
9 Check of appearance functions	The appearance functions are checked lastly when all the above inspections are over. 1. Make sure nothing wrong is detected with the figures displayed. 2. Make sure each operation is possible in a correct and smooth way. 3. Make sure no dust nor stains attached to each function part, and others.	
	S Select button (Selection of digits) R Read/Set button (Digit correction Display switch)	

CITIZEN WATCH CO., LTD. Tokyo, Japan