TECHNICAL INFORMATION

CITIZEN QUARTZ
Cal. No. P130

OCITIZEN

■1. OUTLINE

CAL. P130, is a 2-tier display digital watch which has a 30 atmospheric pressure water-resistant constitution as well as shock-resistance.




■2. SPECIFICATION

CA	AL. No.	P130				
Model		Digital Quartz Watch				
Module size (mm)		$29.0\phi \times 6.85^{t}$				
Accuracy		±30 sec./month at normal temperature.				
Oscillation		32,768 Hz				
.Di	splay method	FE twist-type nematic LC (Liquid Crystal)				
Ìn:	tegrated circuit	C/MOS-LSI 1 unit				
Effective temperature range		0°C ~ +55°C (32°F ~ 131°F)				
Adjustment of time rate		By trimmer condenser				
Measurement of time rate		2 seconds				
	Normal time	Hour, minute, second (12/24 hour switching function)				
ioi	Calendar	Month, day, date (year)				
Display function	Alarm I	AM/PM, hour, minute (12H/24H is coupled to the normal time mechanism.)				
√ fc	Alarm II	AM/PM, hour, minute (12H/24H is coupled to the normal time mechanism.)				
spla	Stopwatch	Minute, second (1/100 sec.) Up to 59 min. 59 sec. 99.				
Ö	Timer	Minute, second Up to 99 min.				
	Dual time	AM/PM, hour, minute (12H/24H is coupled to the normal time mechanism.)				
Α	dditional function	 Chime Illumination lamp Alarm monitor Fully automatic calendar (1985 – 2035) Instantaneous time return function 				
	Parts No.	280-205				
	Cell code	CR2025				
=	Size	$20.0\phi \times 2.5^{t}$ (mm)				
er c	Voltage	3V				
Power cell	Capacity	120mAH				
	Lifetime	Approx. 8 years. (on the condition that the illumination lamp is used 1 sec./day and alarm is used 20 sec./day.)				
С	urreņt value	Under 1.8µA				
R	emarks					

■3. HANDLING INSTRUCTIONS


3-1. Nomenclature

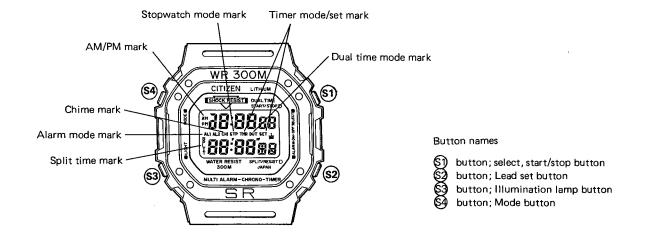

3-2. Switching Button Specifications


Model	Tir	ne	Alar	m I	Aları	m II		Tin	Timer		Dual time	
Button	Normal	Correction	Normal	Correction	Normal	Correction	Stopwatch	While being set	While not being set	Normal	Correction	
· (5)	Summoning correction mode	Selection of digits to be corrected	Summoning of correction	Selection of digits to be corrected	Summoning of correc- tion mode	Selection of digits to be corrected	Start/Stop	Start	/Stop	Summoning correction mode	Selection of digits to be corrected	
<u>82</u>		Correction	Alarm ON/OFF	Correction	Alarm ON/OFF	Correction	Split/Reset	Correction of set time	Fly-back		Correction	
S 3	Lamp		, -		←		←		=	•	-	
S	Changeover to alarm mode I	Instant manual return	Changeover to alarm mode II	Instant manual return	Changeover to stopwatch mode	Instant manual return	Changeover to timer	Changeover	to dual time	Changeover to time mode	Instant manual return	
§) · §2	Chime ON/OFF										•	
(5) (2) (3) (4)	All the displays are reset and and illuminated		←		←		4	-		. 4-		

3-3. Changeover of the displays (changeover of mode)

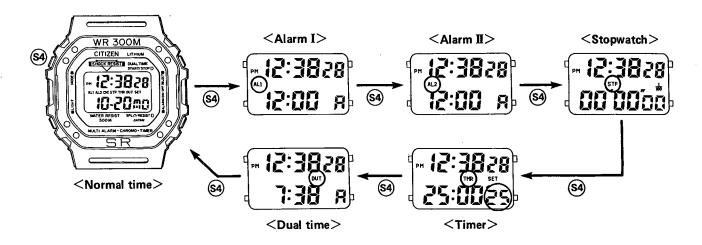


NOTE: Flashing parts are circled. (in correction mode)

Normal time mode changes into the correction mode if the (S1) button is continuously pushed.

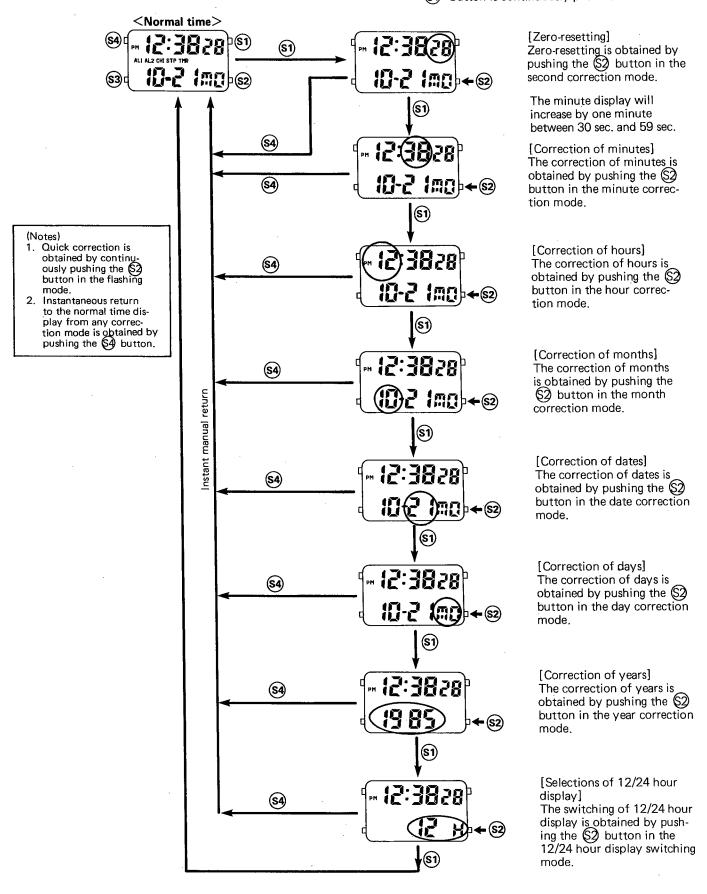

3-5. Correction of alarm I time

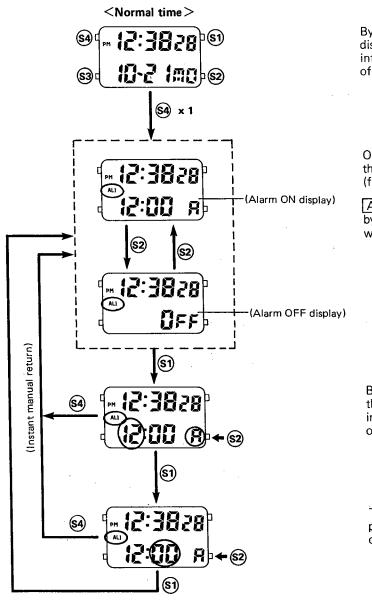

By pushing the 🚱 button in the normal display mode the calendar display changes into the alarm I display in the lower half of the display panel.

ON/OFF switching is obtained by pushing the ② button in the alarm I display mode (flashing).

Alarm monitor: Alarm monitor is obtained by continuously pushing the button when the alarm is ON.

By continuously pushing the button, in the alarm I display, the hour becomes flashing mode. Then hour correction mode is obtained by pushing the button.

The correction of minutes is obtained by pushing the button in the minute correction mode (flashing).


(Notes)

- 1. A quick correction is obtained by continuously pushing the 🔇 button in a flashing mode (correction mode).
- 2. Alarm sounds for approx. 20 seconds, both alarm I or II.
- 3. Instant manual return is obtained by pushing the (\$4) button in all alarm correction modes.
- 4. 12H/24H is coupled to the normal time display.
- 5. Alarm stops when any button is pushed.

3-6. Correction of alarm II

Correction procedure of alarm II time is the same as alarm I.


3-7. Operation procedure of the stopwatch

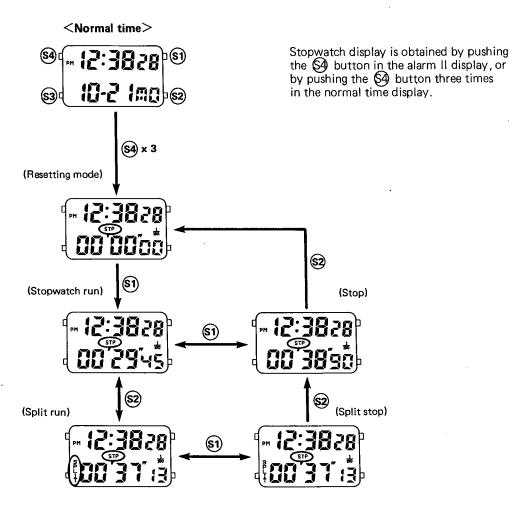

(Note)

The stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99. Every time the stopwatch repeats after every 59 min. 59 sec. 99 sec.


3-8. Operation procedure of the timer

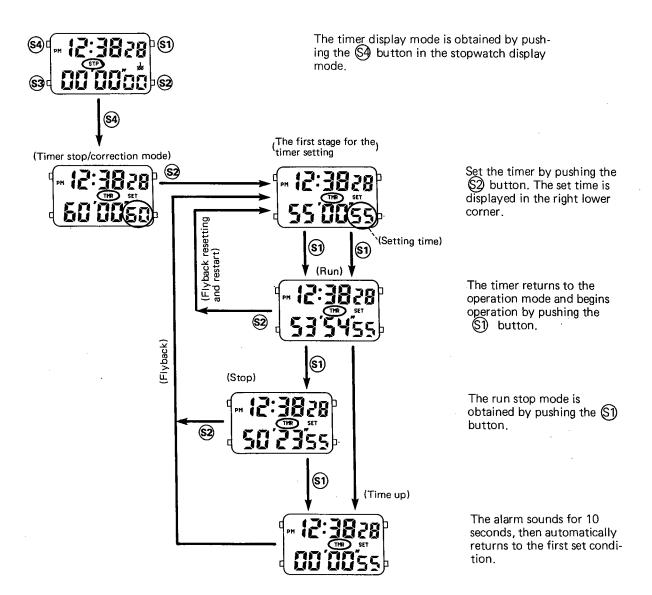

(Notes)

- Correction of the setting time is obtained by pushing the 😒 button in the timer stop/correction mode. A quick correction is obtained by continuously pushing the 💲 button in this mode.
 - The maximum setting time is up to 99 minutes.
- The timer is returned to the first setting mode and begins operation by manually pushing the ② button in the run modes.

3-9. Operation procedure of the dual time

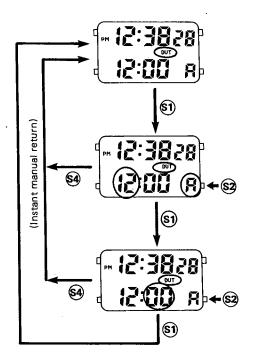

The dual time display is obtained by pushing the S4 button in the timer display mode.

[Dual time display] Correction of hours (flashing) is obtained by continuously pushing for one or more seconds the (5) button.


[Correction of hours]
Correction of hours is obtained by pushing the (\$2) button in the hours correction mode.

[Correction of minutes]
Correction of minutes is obtained by pushing the ② button in the minutes correction mode.

(Notes)

- A quick correction is obtained by continuously pushing the button in the correction mode.
- 12H/24H is coupled to the normal time display and switches automatically. (In the 24 hour display mode, A/P is not marked.)

3-10. Operation procedure of the chime

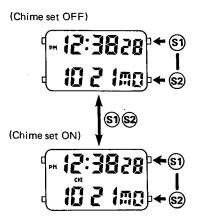


ON/OFF switching is obtained by simultaneously pushing the (3) and (3) buttons in the normal time display mode.

When the CHI mark (chime set ON) is displayed, the alarm will sound every hour.

3-11. Operation procedure of the all-reset

After replacing the power cell the all-reset is obtained by simultaneously pushing all buttons (\$), \$2, \$3 and \$4), which causes the displays to flash. A beep will sound at this time. (The all reset mechanism should be operated after replacing the power cell, otherwise it might not operate normaly.)

■4. CIRCUIT CONSTITUTION DIAGRAM

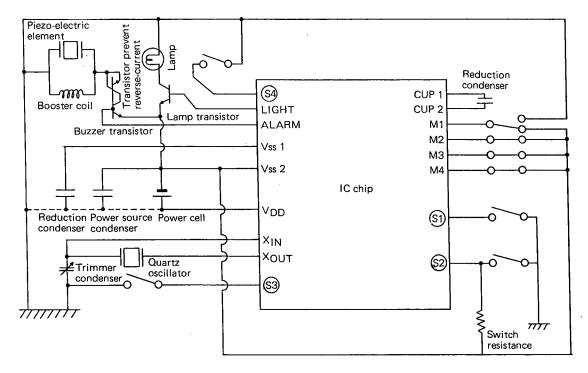


■5. EXPLANATION OF RELATED MATTERS

a) Using the special case constitution (triple constitution)

/.

As a shock-resistant constitution, rubber/plastic coverings on the case body are used for absorbing shock and are fixed in the case with 4 screws.

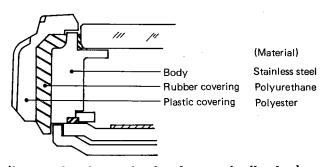

b) Definition of a shock resistant watch by ISO (International organization for standardization) (aim/application range)

- To meet the following irreducible minimum of demands without submitting the watch to visible damage.
- Substitutional test: Dropping the watch accidentally on a horizontal surface of hard wood from 1 meter, examine how much damage the watch will receive.

(The irreducible minimum demand)

Remove the watch band and strike the watch with a resin hammer from 1 meter, the first from at 9 o'clock angle and the 2nd time perpendicular from the glass.

- This operation should not stop watch operation after transmitting the shock.
- Time rate should be within 2 seconds per day (in a quartz watch).
- No decrease in quality such as damage to funcion/appearance (for example; wrong display, removal of the hands, clash of glass, damage of buttons and so on).

c) Pressure level of pushing the buttons

The watch is stronger than usual so the button can not be thrust into the inner part by hydraulic pressure because it has a 30 atmospheric pressure water-resist function.

d) The all-reset


Do the all-reset operation by simultaneously pushing the (S1), (S2), (S3) and (S4) buttons after exchanging the power cells. If you do not do this the operation will not be correct. After the all reset, you will have the following display.


Normal time mode : AM 12 hr. 00 min. 00 sec. Stopwatch : 00 min. 00 sec. 00 Calendar mode : January 1st, Tuesday Timer mode : 00 min. 00 sec. Dual time : 12 hr. 00 min. A

■6. DISASSEMBLY/ASSEMBLY OF MODULE


Disassembly module: (1) → (14)

Assembly module : (14) → (1)

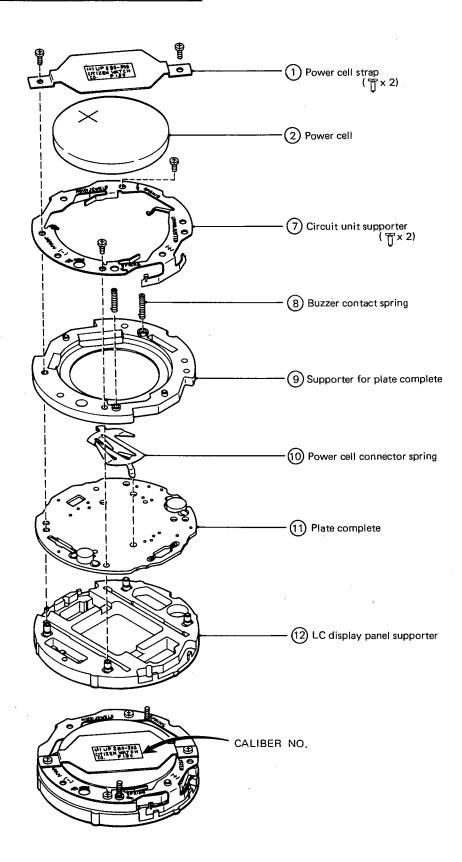

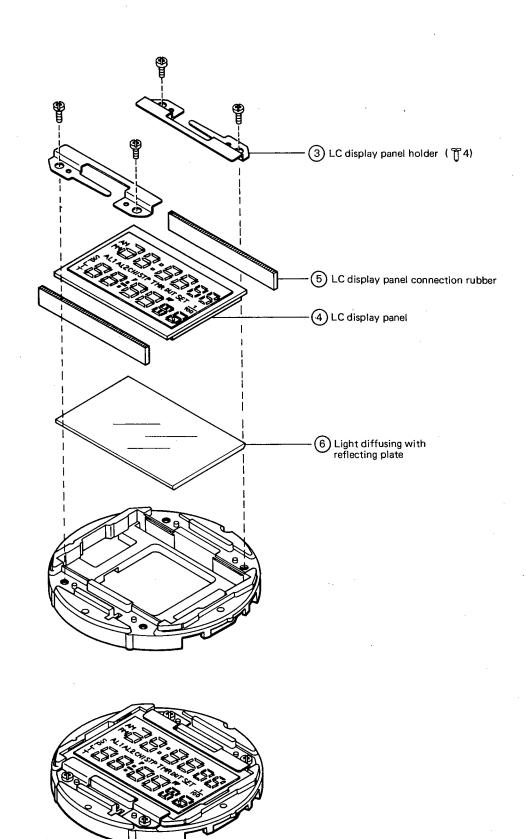

■7. TROUBLESHOOTING AND ADJUSTMENT

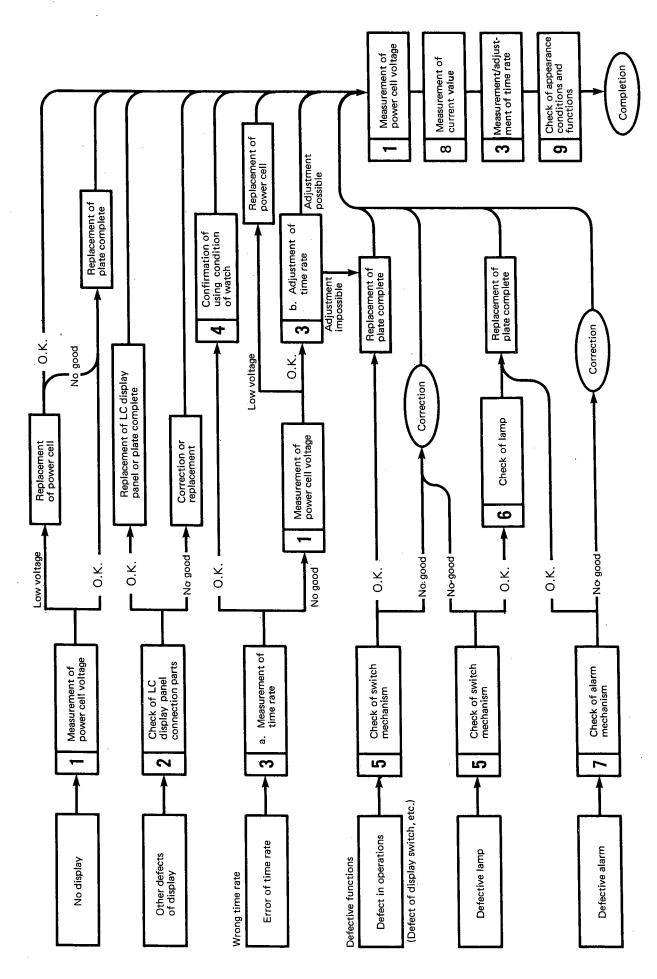

Check points	How to check	Results & treatment
(1) Measurement of power cell voltage	[Refer to Technical Manual Basic Course II-1-a for tester setting]	Over 2.8V → Nondefective Under 2.8V → Replace the power cell
(2) Check of LC display panel connection parts	[Refer to Technical Manual Basic Course II-2-a-Digital Part] OChecking all the segments; simultaneously push the \$1 \$2 \$3 and \$4 button, all segments are flashing while pushed. In the above condition, check for defective segments.	
(3) Measure- ment/ Adjustment of the time rate	[Refer to Technical Manual Basic Course II-2-d] a) Measurement of the time rate Measurement of the time rate can be made with the "MEASURE TIME" set at a range of 2 seconds. b) Adjustment of the time rate Turn the trimmer condenser clockwise.	Enables adjustment → Nondefective Does not enable adjustment → Replace the plate complete
(4) Confirmation of using conditions of watch	[Refer to Technical Manual Basic Course II-2-e] Check to see if the handle is operating correctly or not.	

(.

Check points	How to check	Results & treatment
(5) Check of switch mechanism	 Check whether the pattern of the plate firmly contacts the switch actuating spring. Check whether the push buttons has not been deformed and has no dust or dirt on it. 	
	SPRING SPRING	
	*To maintain the waterproof of the watch and the smooth operation of the buttons, be sure to put silicone oil on the push button packing.	÷
(6) Check of lamp	[Refer to Technical Manual Basic Course II-1-e for tester setting]	Flashing → Nondefective Not flashing
		→ Replace the plate complete
(7) Check of alarm mechanism	[Refer to Technical Manual Basic Course II-1-d for tester setting] a. Checking the piezo-electric element If the white color piezo-electric element attached directly to the case back with adhesive, especially the part touching by the buzzer contact spring, have a defect or a crack, the alarm may not sound. b. Checking the buzzer contact spring Check whether the buzzer contact spring is bent/ deformed or not. c. Checking alarm output signal of plate complete (You can check without removing the module from	
	(Tester range DC0.3V)	Hand oscillating → Nondefective No oscillating → Replace the plate complete
	•In the alarm monitor mode, (+) to the power cell surface (-) to the buzzer contact spring.	

Check po	ints	How to check	Results & treatment
8) Mesauring the curre value	g nt	[Refer to Technical Manual Basic Course ${ m II}$ -1-f for tester setting]	Current value of the complete module
		(Tester range DC12μA)	Under 1.8µA → Nondefective
		+	Over 1.8µA Singularly measure the unit of the plate complete for current value
		APAN IN FOR	•Current value of the plate complete
	٠		Under 1.5μA → Nondefective
			Over 1.5µA → Replace the plate complete
		·	
(9) Check of appeara and fun	nce	[Refer to Technical Manual Basic Course II-2-f]	

(. r

CITIZEN WATCH CO.,LTD. Tokyo, Japan