



CAL. 46D41 MOVEMENT EXPANDED VIEW 1/2

- Disassembly and assembly procedure numbers correspond to the numbers given in Notes on Disassembly and Assembly

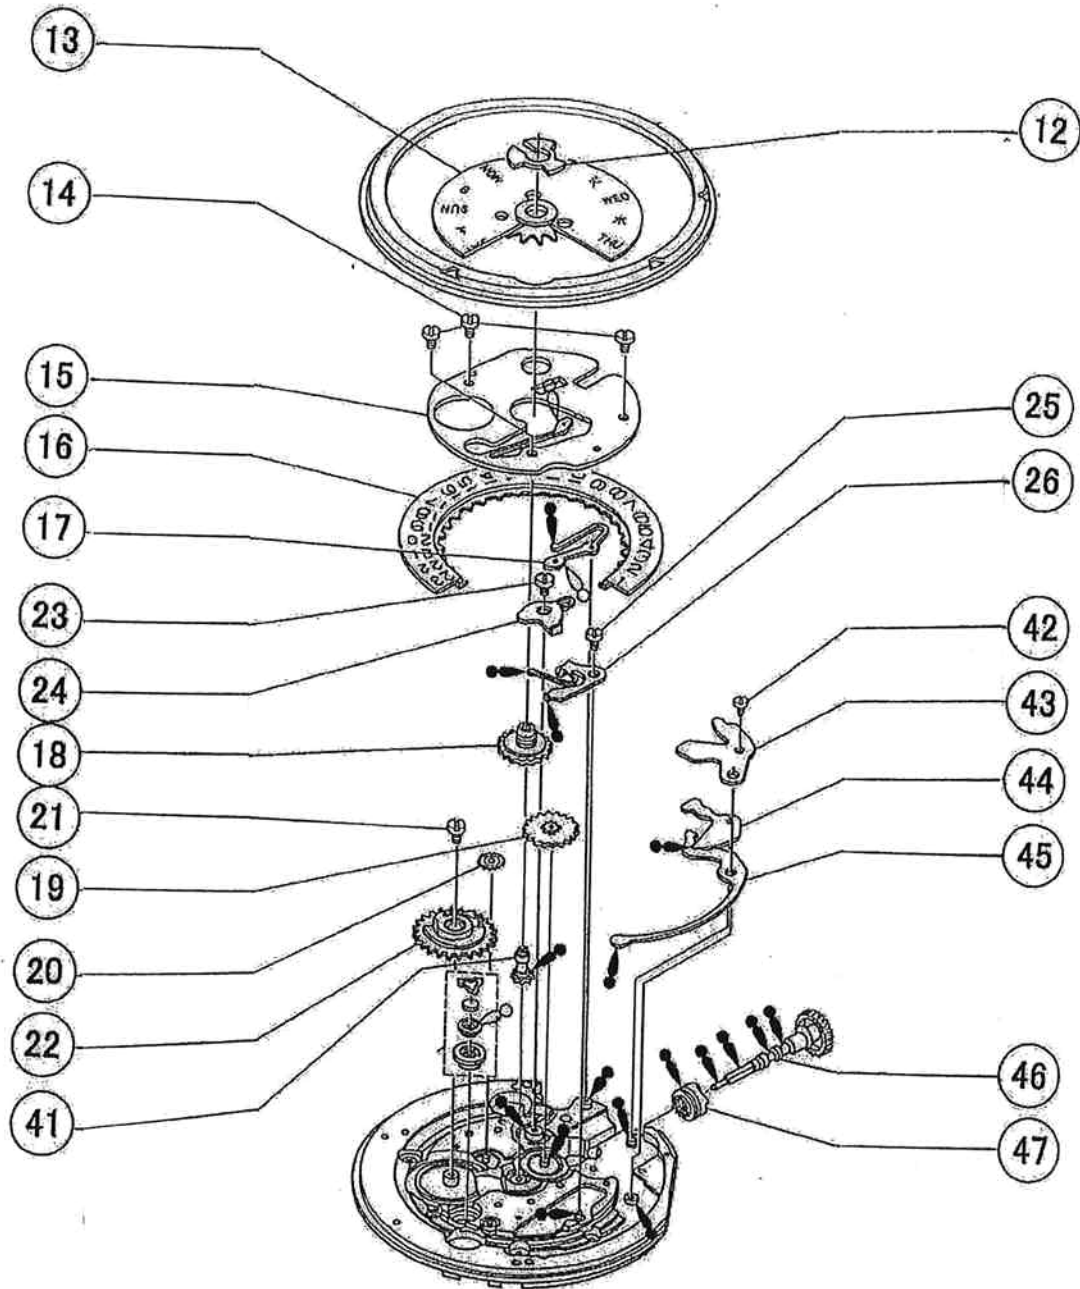

CAL. 46D41 MOVEMENT EXPANDED VIEW 2/2

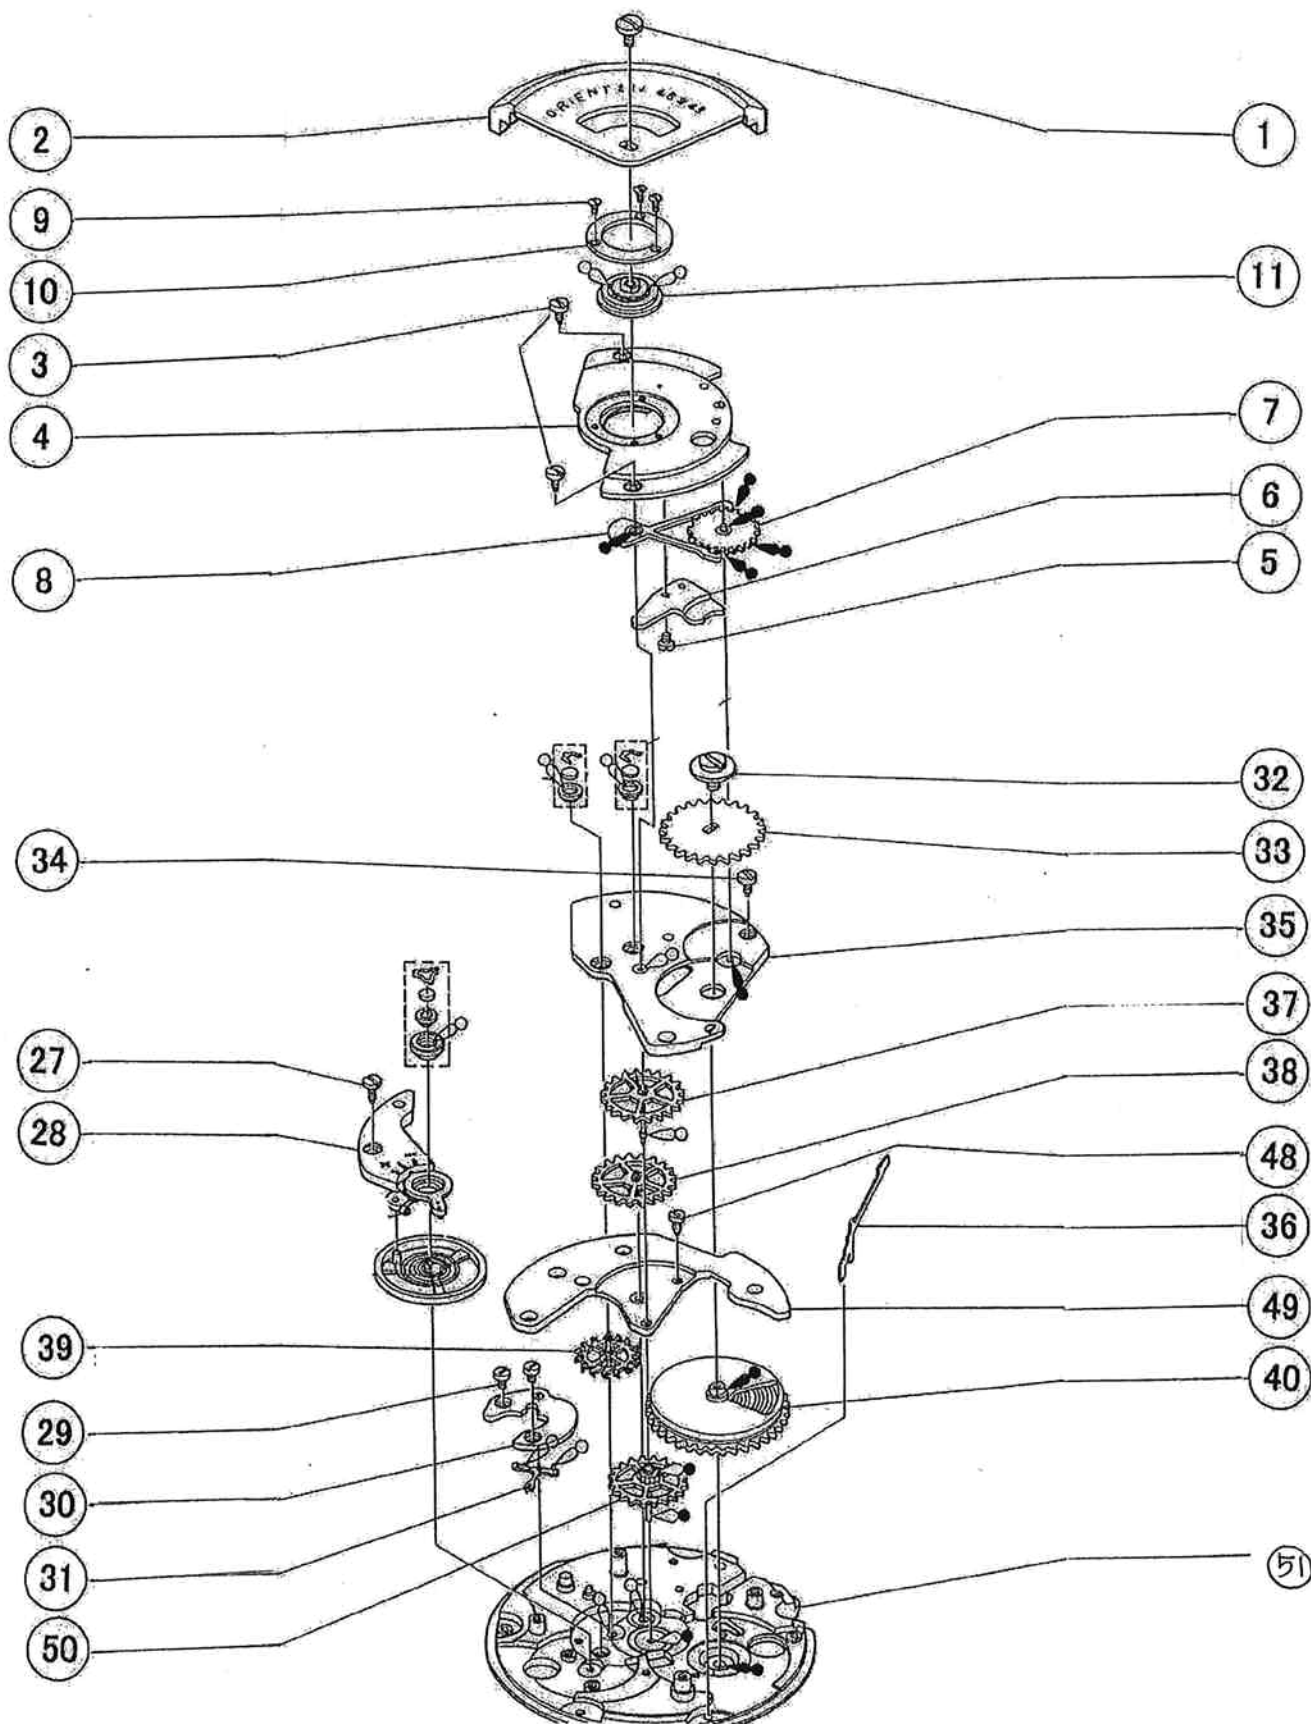

Cal. 46D41 Movement parts list

CAL	NO	PARTS CODE	PARTS NAME	CAL	NO	PARTS CODE	PARTS NAME
46D41	1	012508	OSCILLATING WEIGHT SCREW	46D41	31	300846940	PALLET FORK
46D41	2	600146D41	OSCILLATING WEIGHT	46D41	32	012507	RATCHET WHEEL SCREW
46D41	3	012510	AUTOMATIC TRAIN BRIDGE SCREW	46D41	33	400046941	RATCHET WHEEL
46D41	4	190046G42	AUTOMATIC TRAIN BRIDGE	46D41	34	012421H	BARREL AND TRAIN WHEEL BRIDGE SCREW
46D41	5	012012H	TRANSMISSION WHEEL COVER SCREW	46D41	35	140046943	BARREL AND TRAIN WHEEL BRIDGE
46D41	6	624046941	TRANSMISSION WHEEL COVER	46D41	36	401146943	CLICK
46D41	7	605046G42	TRANSMISSION WHEEL	46D41	37	240046940	SECOND WHEEL
46D41	8	620031743	PAWL LEVER	46D41	38	230046941	THIRD WHEEL
46D41	9	012509	BALL BEARING HOLDER SCREW	46D41	39	250046941	ESCAPE WHEEL
46D41	10	623046B43	BALL BEARING HOLDER	46D41	40	214046940	MOVEMENT BARREL (WITH MAINSPRING)
46D41	11	610246941	BALL BEARING	46D41	41	224046940	CENTER WHEEL (WITH CANNON PINION)
46D41	12	900046940	DAY INDICATOR SPRING CLIP	46D41	42	012461	YOKE HOLDER SCREW
46D41	13		*DAY INDICATOR	46D41	43	407046940	YOKE HOLDER
46D41	14	012172H	DATE INDOCATOR MAINTAINING PLATE SCREW	46D41	44	410046940	SETTING LEVER
46D41	15	516046D40	DATE INDOCATOR MAINTAINING PLATE	46D41	45	404046940	YOKE
46D41	16		*DATE INDICATOR	46D41	46	911469480	WINDING STEM
46D41	17	517046940	DATE JUMPER	46D41	47	427046940	SLIDING PINION
46D41	18	420146940	HOUR WHEEL	46D41	48	012461	CENTER WHEEL BRIDGE SCREW
46D41	19	423046940	MINUTE WHEEL	46D41	49	120046943	CENTER WHEEL BRIDGE
46D41	20	570146940	INTERMEDIATE DATE WHEEL	46D41	50	224046940	CENTER WHEEL (WITH CANNON PINION)
46D41	21	012172H	DATE INDICATOR DRIVING WHEEL SCREW	46D41	51	100046D40	MAIN PLATE
46D41	22	510046D40	DATE INDICATOR DRIVING WHEEL	46D41			
46D41	23	012172H	DAY CORRECTOR SCREW	46D41			
46D41	24	548046D40	DAY CORRECTOR	46D41			
46D41	25	012172H	OPERATING LEVER SCREW	46D41			
46D41	26	530046943	OPERATING LEVER	46D41			
46D41	27	012510	BALANCE BRIDGE SCREW	46D41			
46D41	28	170046G42	BALANCE BRIDGE	46D41			
46D41	29	012172H	PALLET BRIDGE SCREW	46D41			
46D41	30	160046940	PALLET BRIDGE	46D41			

