

Calibre 1530

Base Calibre 1530



- Ø28.5mm
- Train: 18.000
- Automatic
- Centre second
- Shock Proof
- 26 Jewels

	N°	Idem calibre	English
	116		Casing-up clamp
	117		Casing-up clamp
	166	3055	Casing-up clamp screw
	1530-310		Barrel with arbor
	7822		Barrel bridge
	7823		Train wheel bridge
	7823-1		Foot for train wheel bridge

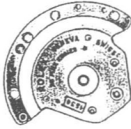
	N°	English
	7825	Mainspring, standard strength
	7825-1	Mainspring, weak strength
	7826	Barrel arbor
	7827-9	Bush for barrel-lower
	7829	Centre wheel with cannon pinion
	7830	Jewel for centre wheel-upper
	7831	Third wheel
	7832	Jewel for third wheel-upper
	7833	Jewel for third wheel-lower
	7834	Second wheel
	7835	Jewel for second wheel-upper
	7836	Jewel for second wheel-lower
	7837	Driving wheel over third wheel

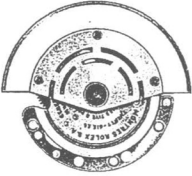
	N°	English
	7838	Centre second pinion
	7839	Second pinion friction-spring
	7840	Screw for second pinion friction-spring
	7841	Escape wheel, 26 jewels
	7842	Escape wheel, 17 jewels
	7843	In-setting for escape wheel 17 jewels-upper /lower
	7844	Pallet bridge
	7845	Screw for pallet bridge
	7846	Pallet fork
	7846-1	Banking pin
	7848	Entry pallet
	7849	Exit pallet
	7850	Jewel for pallet fork-upper / lower

	N°	English
	7852	Balance bridge
	7853	Screw for: • Balance bridge • Barrel bridge • Train wheel bridge long, thread Ø 1.00mm
	7854	Screw for train wheel bridge short, thread Ø 0.80mm
	7855	Balance with Breguet hairspring, timed
	7856-1	Adjusting washer: 1/100
	7856-2	2/100
	7856-3	3/100
	7856-4	4/100
	7856-5	5/100
	7857	Screw for balance
	7858	Screw for regulating the balance
	7863	Screw for stud
	7864	Balance staff collet fitting Ø 0.53mm

	N°	English
	7865	Balance staff collet fitting Ø 0.43mm
	7866	Roller
	7868	Regulator
	7869	Winding stem thread 0.90mm
	7869-1	Winding stem thread 1.10mm
	7870	Winding pinion
	7871	Sliding pinion
	7872	Crown wheel
	7873	Crown wheel core
	7874	Crown wheel seating
	7875	Screw for crown wheel core
	7876	Ratchet wheel
	7877	Screw for ratchet wheel

	N°	English
	7878	Click
	7879	Screw for click
	7880	Click spring
	7881	Setting-lever
	7882	Screw for setting-lever
	7883	Setting-lever jumper
	7885	Yoke for sliding pinion
	7885-1	Yoke stud
	7886	Yoke spring
	7887	Setting-wheel
	7887-7	Ring for setting-wheel stud
	7888	Minute wheel
	7888-1	Minute wheel stud

	N°	English
	7889	Cannon pinion ht. 2.23mm
 	7890	Hour wheel
	7891	Friction-spring for hour wheel
	7892	Dial screw
	7896	Screw for case head bevelled
	7897	Screw for case head flat
	7898	Set of screws
	7900	Automatic device bridge, upper
	7901	Automatic device lower bridge
	7902	Screw for Automatic device bridge, upper

	N°	English
	7903	Oscillating weight
	7904	Automatic device module
	7905	Screw for automatic device lower bridge
	7906	Axle for oscillating weight
	7907	Jewel for oscillating weight-upper
	7909	Jewel for oscillating weight-lower
	7910	Pinion for oscillating weight
	7911	Spring-clip for oscillating weight
 	7912	Reversing wheel, mounted
 	7912-1	Driver, only

	N°	English
	7913	Jewel for reversing wheel-upper /lower
 	7917	Driving wheel for ratchet wheel
	7918	Jewel for driving wheel for ratchet wheel-upper
	7919	Jewel for driving wheel for ratchet wheel-lower
	7920	Bush for barrel-upper
 	7930	Shock absorber for balance-upper
 	7931	Shock absorber for balance-lower
	7932	In-setting for balance-upper / lower
 	7934	In-setting spring for balance-upper
	7936	In-setting for escape wheel 26 jewels-upper /lower
	7937	Cap jewel for escape wheel-upper /lower
	7938	In-setting spring for escape wheel-upper /lower

	N°	Idem calibre	English
	8075		Main plate
	8076		Bush for centre wheel-lower
	55003	3035	Screw for setting-lever jumper
	95019-3	3035	Cap jewel for balance-upper / lower
	95019-4	3035	In-setting spring for balance-upper /lower