

**SEIKO**
































**QUARTZ**



 





**Cal. 7918A**

**PARTS LIST**

# Cal. 7918A



		† 		† 	† 	
122 791	131 793	221 791	225 792	231 791	241 792	261 792
						
271 792	282 589	354 791	383 791	384 710	385 710	387 710
						
388 799	390 710	391 791	399 770	491 610	701 791	706 791
						
803 799	884 557	4001 791	4002 791	4146 791	4216 791	4239 791
						
4242 791	4408 792	☆ U.C.C. 384				

							
022 282	022 423	022 424	022 465	022 468	022 764	027 810	027 817

# Cal. 7918A

## Characteristics

Casing diameter :  $\phi$  18.0 mm  
 Maximum height : 3.6 mm without battery  
 Jewels : 7j  
 Frequency of quartz crystal oscillator : 32,768 Hz (Hz = Hertz . . . . Cycles per second)  
 Driving system : Step motor (2 poles)  
 Regulation system : Trimmer condenser

PART NO.	PART NAME	PART NO.	PART NAME
122 791	Center wheel bridge	022 465	Minute hand screw
131 793	Third wheel bridge	022 468	Setting lever spring screw
221 791	Center wheel & pinion	022 764	Dial screw
225 792	Cannon pinion	027 810	Pin for plus terminal of battery connection
231 791	Third wheel & pinion	027 817	Minute wheel pin
241 792	Fourth wheel & pinion	011 406	Upper hole jewel for fourth wheel
261 792	Minute wheel	011 503	Upper hole jewel for fifth wheel
271 792	Hour wheel	011 503	Lower hole jewel for fifth wheel
282 589	Clutch wheel	011 503	Upper hole jewel for step rotor
354 791	Winding stem	011 541	Lower hole jewel for step rotor
383 791	Setting lever	011 541	Upper hole jewel for sixth wheel
384 710	Yoke (Clutch lever)	011 541	Lower hole jewel for sixth wheel
385 710	Yoke spring		
387 710	Minute wheel bridge	☆SEIKO SB-D1	Silver peroxide battery
388 799	Setting lever spring	☆SEIKO TR41SW	
390 710	Setting lever axle	☆U. C. C. 384	Silver oxide battery
391 791	Second setting lever	☆Maxell SR41SW	
399 770	Casing clamp	☆SONY EVEREADY	
491 610	Dial washer	384	
701 791	Fifth wheel & pinion		
706 791	Sixth wheel & pinion		
803 799	Setting wheel lever complete		
884 557	Holding ring for dial		
4001 791	Circuit block		
4002 791	Coil block		
4146 791	Step rotor		
4216 791	Insulator for battery connection		
4239 791	Rotor stator		
4242 791	Plus terminal of battery connection		
4408 792	Insulating spacer for circuit block		
022 282	Minute wheel guard screw		
022 423	Casing clamp screw		
022 424	Center wheel bridge screw		
022 424	Third wheel bridge screw		
022 424	Circuit block screw		
022 424	Coil block screw		
022 424	Second setting lever screw		

## Remarks :

### Battery

- ☆SEIKO SB-D1
- ☆SEIKO TR41SW
- ☆U. C. C. 384
- ☆Maxell SR41SW
- ☆SONY EVEREADY 384

The applied battery for this calibre might be added the substitutive  
 .....in the future. In that case, please refer to separate  
**"BATTERIES FOR SEIKO QUARTZ WATCHES".**

☆Please see remarks.

Part numbers in light letters are not shown in photos.