



CAL. 46U40 MOVEMENT EXPANDED VIEW 1/2

- Disassembly and assembly procedure numbers correspond to the numbers given in Notes on Disassembly and Assembly

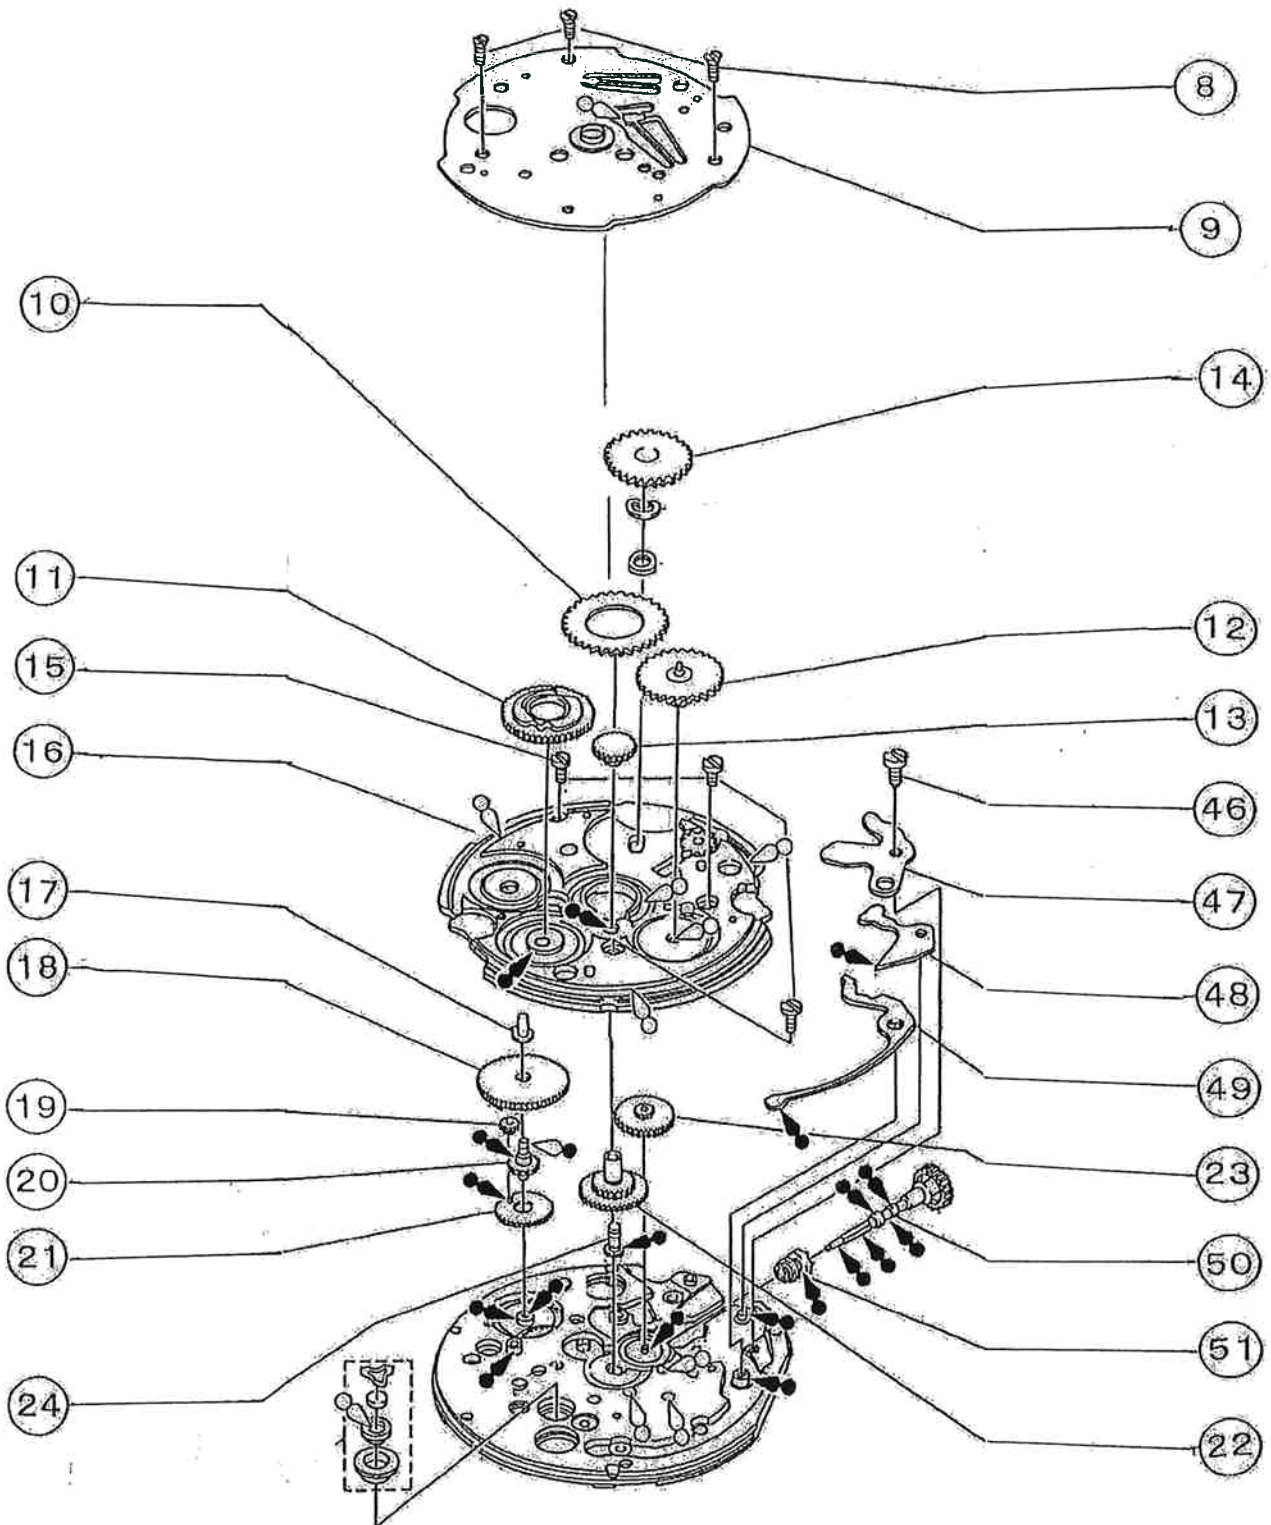

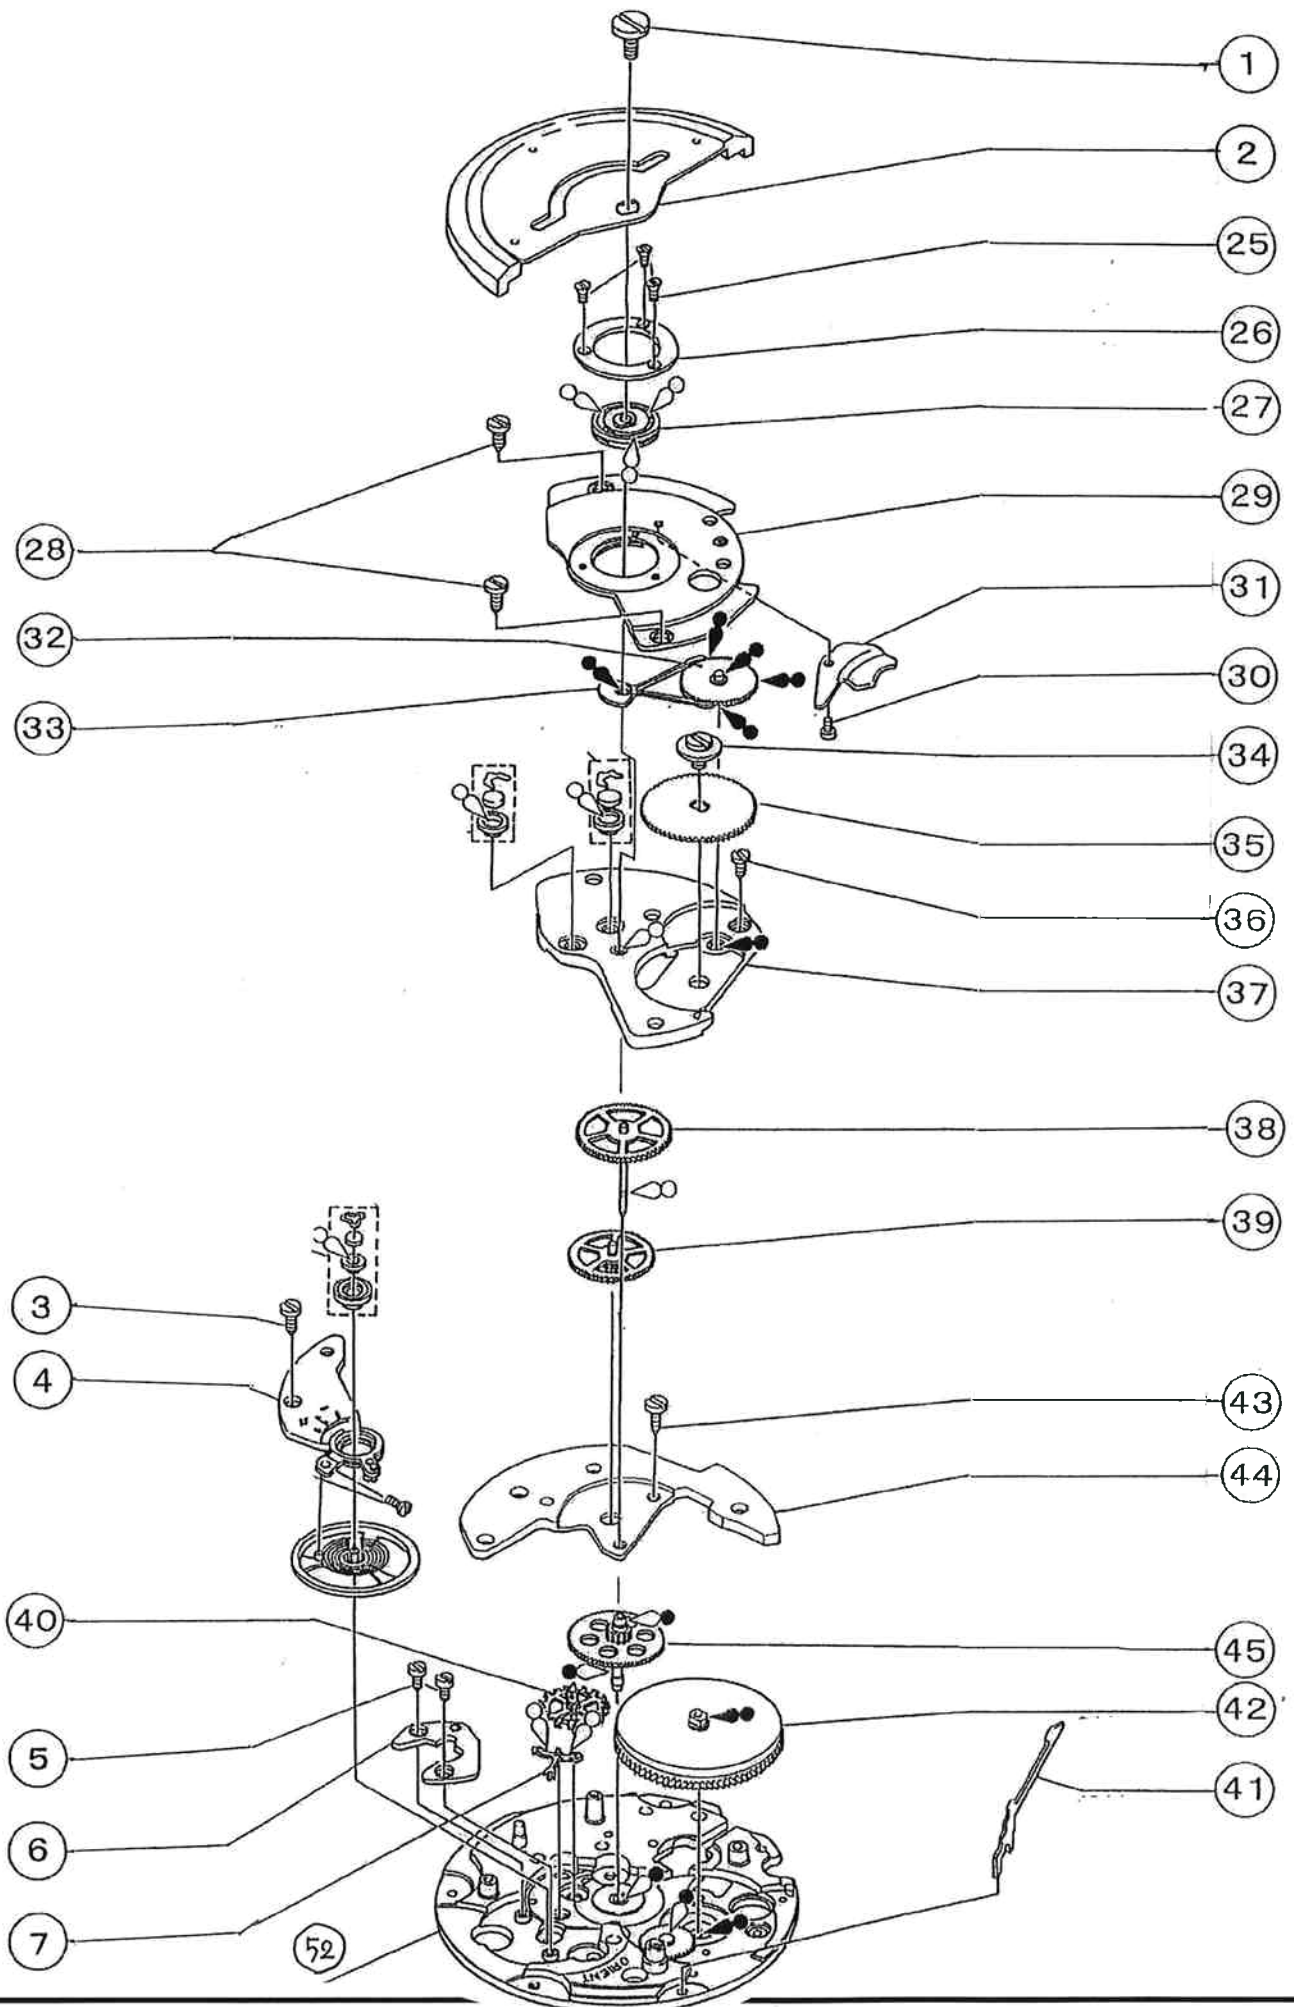

Cal. 46U40 Parts List

CAL	NO	PARTS CODE	PARTS NAME	CAL	NO	PARTS CODE	PARTS NAME
46U40	1	012508	OSCILLATING WEIGHT SCREW	46U40	31	624046941	TRANSMISSION WHEEL COVER
46U40	2	600146U40	OSCILLATING WEIGHT	46U40	32	605046G42	TRANSMISSION WHEEL
46U40	3	012510	BALANCE BRIDGE SCREW	46U40	33	620031743	PAWL LEVER
46U40	4	170046G42	BALANCE BRIDGE	46U40	34	012507	RACHET WHEEL SCREW
46U40	5	012172H	PALLET BRIDGE SCREW	46U40	35	400046941	RACHET WHEEL
46U40	6	160046940	PALLET BRIDGE	46U40	36	012421H	BARREL AND TRAIN WHEEL BRIDGE SCREW
46U40	7	300846940	PALLET FORK	46U40	37	140046943	BARREL AND TRAIN WHEEL BRIDGE
46U40	8	012178	SETTING WHEEL PLATE SCREW	46U40	38	240046K40	SECOND WHEEL
46U40	9	180046H50	SETTING WHEEL PLATE	46U40	39	230046941	THIRD WHEEL
46U40	10	596046H50	INTERMEDIATE DATE WHEEL	46U40	40	250046941	ESCAPE WHEEL
46U40	11	510046H50	DATE INDICATOR DRIVING WHEEL	46U40	41	401146943	CLICK
46U40	12	594046H50	DATE HAND WHEEL	46U40	42	214046F40	MOVEMENT BARREL
46U40	13	573046H50	2ND INTERMEDIATE DATE INDICATOR DRIVING WHEEL	46U40	43	012461	CENTER WHEEL BRIDGE SCREW
46U40	14	585046H50	CALENDAR CORRECTOR SETTING WHEEL	46U40	44	120046943	CENTER WHEEL BRIDGE
46U40	15	012511	AUXILIARY PLATE SCREW	46U40	45	224046K40	CENTER WHEEL (WITH CANNON PINION)
46U40	16	105046U40	AUXILIARY PLATE	46U40	46	012461	YOKE HOLDER SCREW
46U40	17	456046H50	POWER RESERVE INDICATOR CANNON	46U40	47	407046940	YOKE HOLDER
46U40	18	462046F40	POWER RESERVE INDICATOR TRANSMISSION WHEEL A	46U40	48	410046940	SETTING LEVER
46U40	19	465046F40	POWER RESERVE INDICATOR TRANSMISSION WHEEL B	46U40	49	404046940	YOKE
46U40	20	457046F40	POWER RESERVE INDICATOR WHEEL	46U40	50	911469480	WINDING STEM
46U40	21	468046F40	POWER RESERVE INDICATOR TRANSMISSION WHEEL C	46U40	51	427046H50	SLIDING PINION
46U40	22	420046H50	HOUR WHEEL	46U40	52	100046U40	MAIN PLATE
46U40	23	423046940	MINUTE WHEEL	46U40			
46U40	24	224046K40	CENTER WHEEL (WITH CANNON PINION)	46U40			
46U40	25	012509	BALL BEARING HOLDER SCREW	46U40			
46U40	26	623046B43	BALL BEARING HOLDER	46U40			
46U40	27	610246941	BALL BEARING	46U40			
46U40	28	012510	TRANSMISSION WHEEL BRIDGE SCREW	46U40			
46U40	29	190046G42	TRANSMISSION WHEEL BRIDGE	46U40			
46U40	30	012012H	TRANSMISSION WHEEL COVER SCREW	46U40			

