



# CAL. 46X51 MOVEMENT EXPANDED VIEW 1/2

- Disassembly and assembly procedure numbers correspond to the numbers given in Notes on Disassembly and Assembly

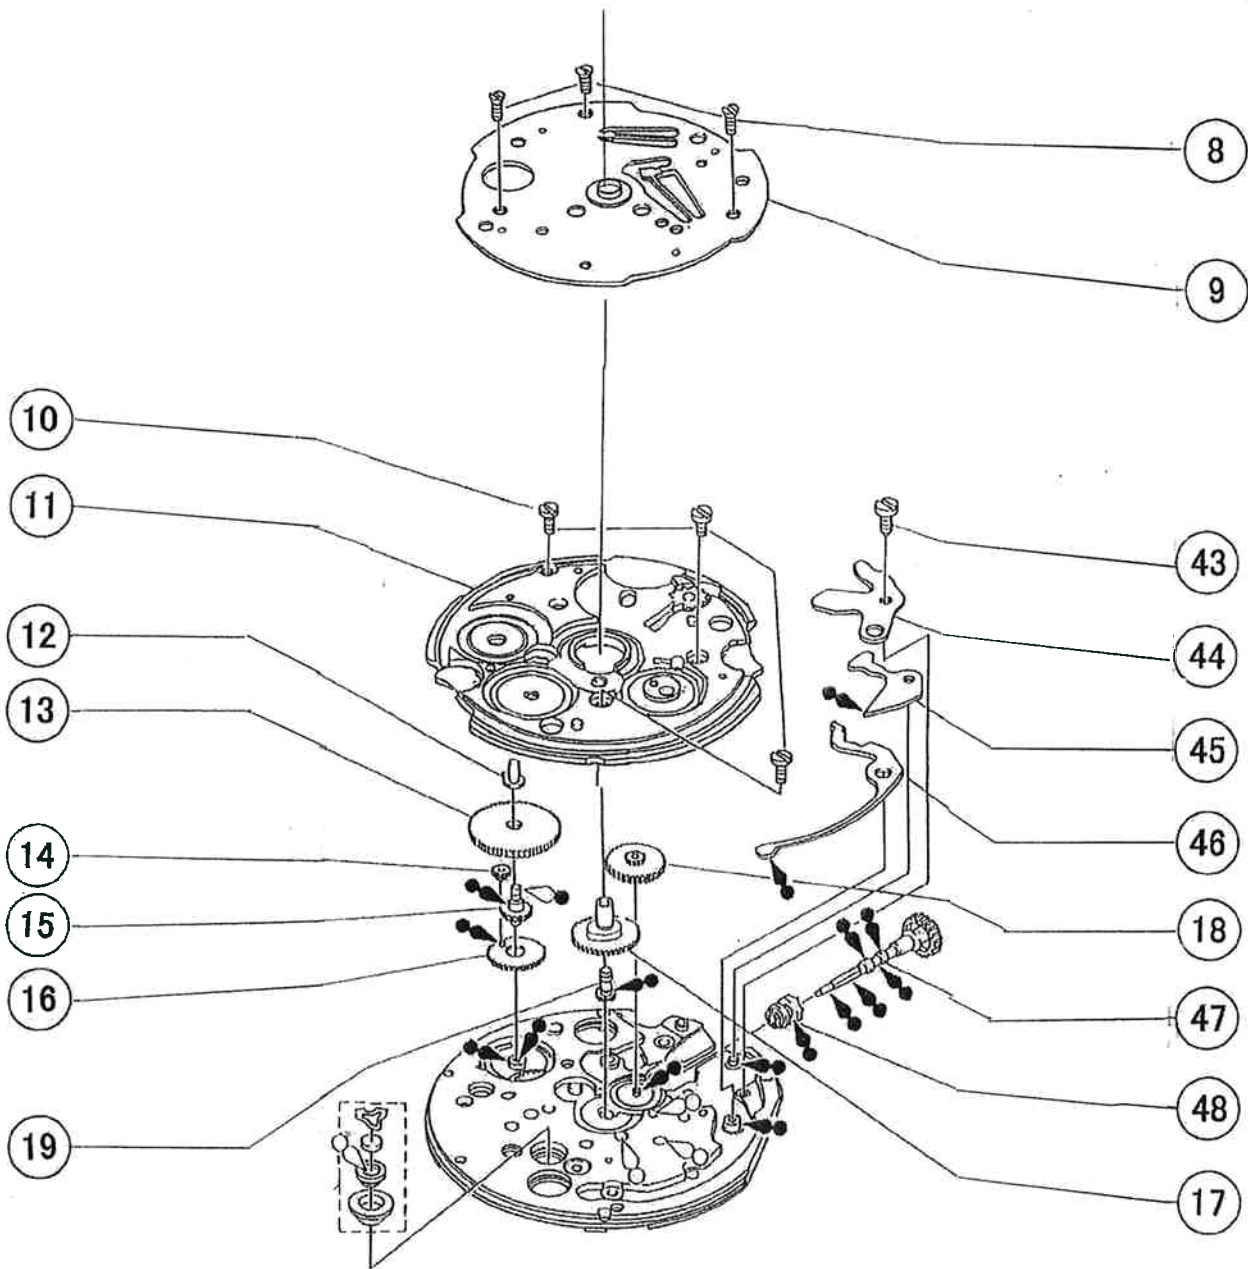

...

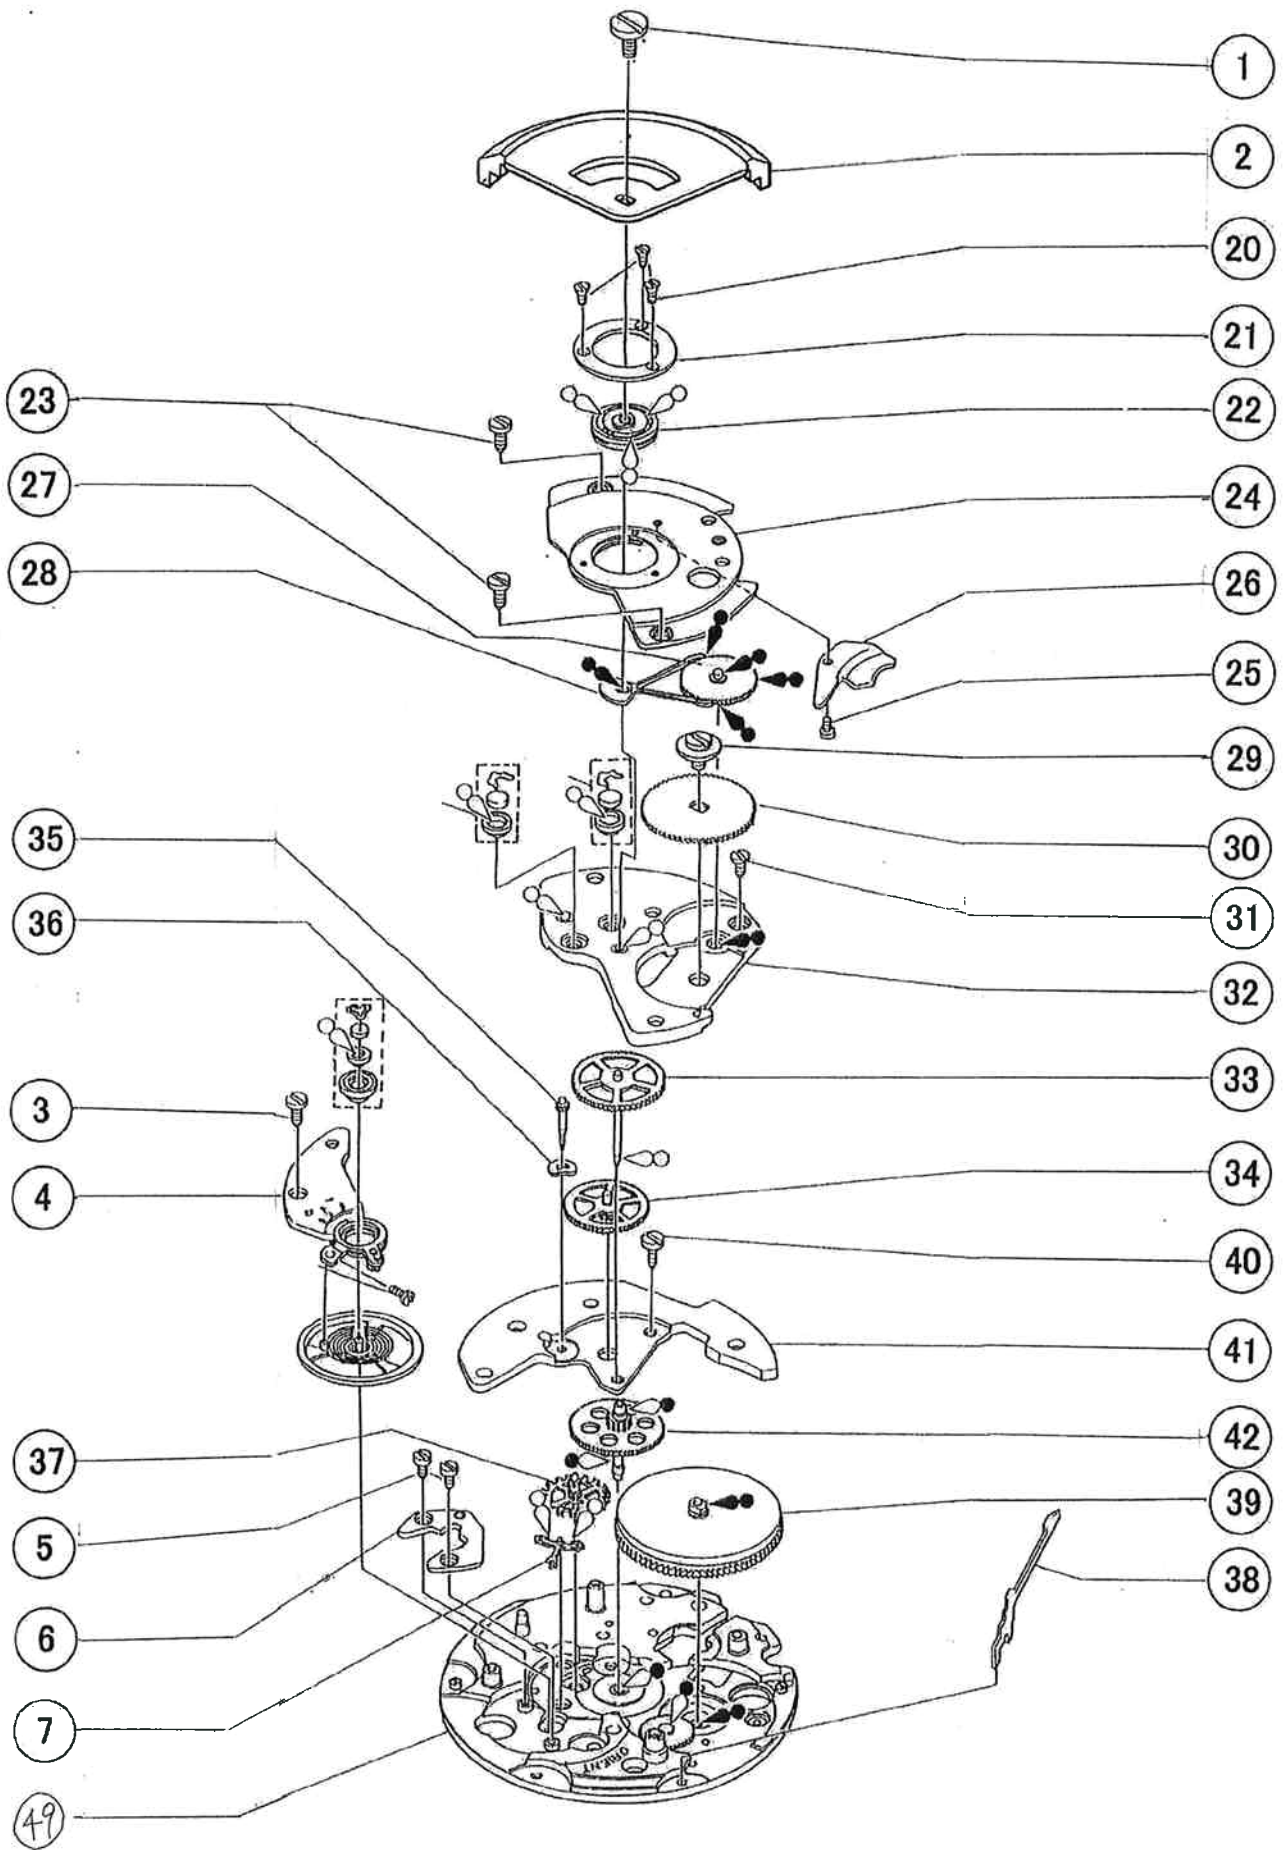

# Cal. 46X51 Movement parts list

CAL	NO	PARTS CODE	PARTS NAME	CAL	NO	PARTS CODE	PARTS NAME
46X51	1	012508	OSCILLATING WEIGHT SCREW	46X51	31	012421H	BARREL AND TRAIN WHEEL BRIDGE SCREW
46X51	2	600146X51	OSCILLATING WEIGHT	46X51	32	140046H50	BARREL AND TRAIN WHEEL BRIDGE
46X51	3	012510	BALANCE BRIDGE SCREW	46X51	33	240046H50	SECOND WHEEL
46X51	4	170046G42	BALANCE BRIDGE	46X51	34	230046941	THIRD WHEEL
46X51	5	012172H	PALLET BRIDGE SCREW	46X51	35	245046H50	CENTER SECOND PINION
46X51	6	160046940	PALLET BRIDGE	46X51	36	408046H50	HOUR WHEEL FRICTION SPRING
46X51	7	300846940	PALLET FORK	46X51	37	250046941	ESCAPE WHEEL
46X51	8	012178	SETTING WHEEL PLATE SCREW	46X51	38	401146943	CLICK
46X51	9	180046H50	SETTING WHEEL PLATE	46X51	39	214046F40	MOVEMENT BARREL ( WITH MAINSPRING )
46X51	10	012511	AUXILIARY PLATE SCREW	46X51	40	012461	CENTER WHEEL BRIDGE SCREW
46X51	11	105046X50	AUXILIARY PLATE	46X51	41	120046H50	CENTER WHEEL BRIDGE
46X51	12	456046H50	POWER RESERVE INDICATOR CANNON	46X51	42	224046H50	CENTER WHEEL ( WITH CANNON PINION )
46X51	13	462046F40	POWER RESERVE INDICATOR TRANSMISSION WHEEL A	46X51	43	012461	YOKE HOLDER SCREW
46X51	14	465046F40	POWER RESERVE INDICATOR TRANSMISSION WHEEL B	46X51	44	407046940	YOKE HOLDER
46X51	15	457046F40	POWER RESERVE INDICATOR WHEEL	46X51	45	410046640	SETTING LEVER
46X51	16	468046F40	POWER RESERVE INDICATOR TRANSMISSION WHEEL C	46X51	46	404046640	YOKE
46X51	17	421046H50	HOUR WHEEL	46X51	47	911469480	WINDING STEM
46X51	18	423046940	MINUTE WHEEL	46X51	48	427046H50	SLIDING PINION
46X51	19	224046H50	CENTER WHEEL ( WITH CANNON PINION )	46X51	49	100046J50	MAIN PLATE
46X51	20	012509	BALL BEARING HOLDER SCREW	46X51			
46X51	21	623046B43	BALL BEARING HOLDER	46X51			
46X51	22	610246941	BALL BEARING	46X51			
46X51	23	012510	AUTOMATIC TRAIN BRIDGE SCREW	46X51			
46X51	24	190046G42	AUTOMATIC TRAIN BRIDGE	46X51			
46X51	25	012012H	TRANSMISSION WHEEL COVER SCREW	46X51			
46X51	26	624046941	TRANSMISSION WHEEL COVER	46X51			
46X51	27	605046G42	TRANSMISSION WHEEL	46X51			
46X51	28	620031743	PAWL LEVER	46X51			
46X51	29	012507	RATCHET WHEEL SCREW	46X51			
46X51	30	400046941	RATCHET WHEEL	46X51			

